


# Instructions For Use

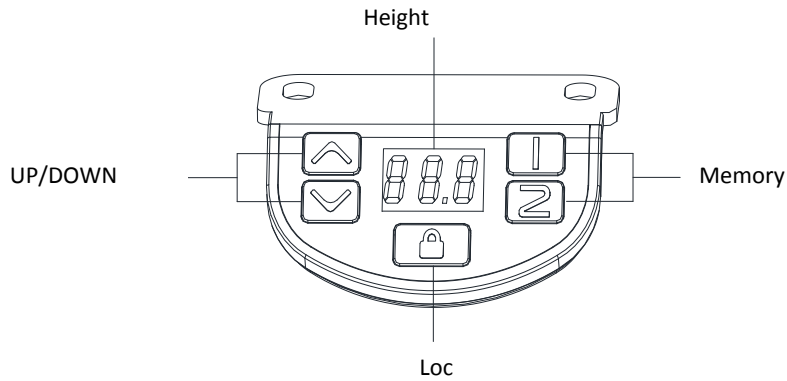

|  |   |
|--|---|
| <p><b>IMPORTANT: You must reset the desk prior to use.</b></p> <p><b>Reset Procedure:</b></p> <ol style="list-style-type: none"> <li>1. Press and hold the DOWN button on the handset until the desk reaches its lowest height.</li> <li>2. Release the DOWN button.</li> <li>3. Press and hold the DOWN button for about 5 seconds until LED sounds "di". The desk will be ready to use.</li> </ol> <p>Note: When the LED display shows an error code, the desk must be RESET prior to use.</p> | <p><b>Lock the handset:</b></p> <ol style="list-style-type: none"> <li>1. Press and Loc button for about 5 seconds until the sound "di".</li> <li>2. LED will show LOC.</li> <li>3. Handset is now locked.</li> </ol> <p>Unlock the handset:</p> <ol style="list-style-type: none"> <li>1. Press and hold the "4" and "2" buttons for about 5 seconds until the sound "di".</li> <li>2. LED will show the height display.</li> <li>3. Handset is now unlocked.</li> </ol> |
| <p><b>Adjust desk height</b></p> <p>Press the UP or DOWN button to adjust the height of the desk.</p>  | <p><b>Changing from inches to centimeters: (CN is centimeters. IH is inches).</b></p> <p>Press and hold the "Loc+2" buttons (about 5 seconds), until the LED switches to "CN", and "IH".</p>  |
| <p><b>Reminder function (H means Hour)</b></p> <ol style="list-style-type: none"> <li>1. Press the "S+1" buttons until the LED shows "0.0H".</li> <li>2. Press the UP or DOWN button to adjust the reminder time "0.5H", "1.0H", "1.5H"...</li> <li>3. Release the button. 2 minutes later Reminder function is now set.</li> </ol> <p>Removing the reminder function, adjust the time "0.0H".</p>   | <p><b>Memory setting</b></p> <ol style="list-style-type: none"> <li>1. Press the UP or DOWN button to move the desk to the desired height.</li> <li>2. Press and hold the number "1 or 2" you want the column set to.</li> </ol>  |

**TROUBLESHOOTING:**

The first step to reconnecting all wires and power code is to make sure the wires are solidly connected. Then RESET THE DESK:

| Error code | Error cause                             | Measure  |
|------------|---|--|
| OL         | Motor overcurrent faulty                | Removing the weight from the desk, weigh no more than the maximum load. Reconnecting all wires and power code is to make sure the wires are solidly connected. |
| E05        | Anti-collision                          | Fixed controller and handset.  |
| HOT        | Overheat                                | Allow the desk to cool down for 5-18 minutes.  |
| Er1        | Motor not connected                     | Check motor cable connection to the controller and execute <b>RESET</b> .  |
| E09        | The top slope goes to the left or right | <b>RESET</b> the desk.   |

If the error cannot be corrected through the described measure:

Unplug the power plug.

Wait approx. 5 minutes

Execute RESET.

If an error still occurs after these steps have been executed. Please contact your sales rep.