


Instructions For Use

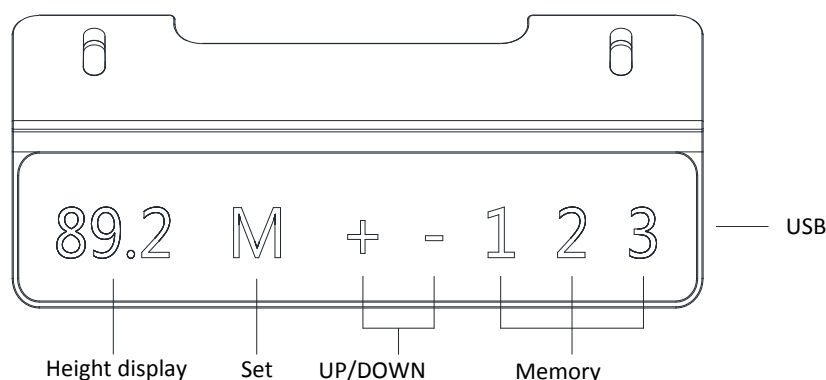

IMPORTANT: You must reset the desk prior to use.

Reset Procedure:

Reset Procedure:

1. Press and hold the "-" button on the handset until the desk reaches its lowest height.
2. Release the "-" button.
3. Press and hold the "-" button for about 5 seconds until the handset display reads "RST", the desk slightly rises 5mm and stops.
4. Release the "-" button. The desk is now ready for use.

Note: When the LED display shows an error code, the desk must be RESET prior to use.

Adjust desk height

Press the "+" or "-" button to adjust the height of the desk.

Memory setting

1. Press the "+" or "-" button to move the desk to the desired height.
2. Press the "M" button until the LED flashes.
3. Press the number "1, 2, or 3" you want the column set to.

Lock the handset:

1. Press and hold the "set" and "+" buttons for about 5 seconds until the sound "di".
2. LED will show LOC.
3. Handset is now locked.

Unlock the handset:

1. Press and hold the "set" and "-" buttons for about 5 seconds until the sound "di".
2. LED will show the height display.
3. Handset is now unlocked.

SETTING THE UPPER AND LOWER LIMITS:

The column can adjust the upper and lower travel limit.

Set the UPPER or LOWER Limit:

1. Use the "+" and "-" buttons to move the column to the desired height.
2. Press the "+" and "-" buttons for about 5 seconds until the sounds "di".
3. The new upper or lower limit is now set.

Removing the Upper or Lower Position:

1. Press the "+" and "-" buttons together for about 5 seconds until the sounds "di".
2. The upper or lower limits are now removed.

NOTE II: Reset the Memory positions if they are outside the new range.

NOTE III: If you attempt to revise a previously set upper or lower limit.

Reminder function (H means Hour)

1. Press the "1" and "3" buttons until the LED shows "x.xh".
2. Press the "+" or "-" buttons to adjust the reminder time "0.5H", "1.0H", "1.5H"...
3. Release the button. 2 minutes later Reminder function is now set. Removing the reminder function, adjust the time "0.0H".

Changing from inches to centimeters: (0 is centimeters. 1 is inches).

1. Press and hold the "M" button for 5 seconds until the LED display reads "S-1" and starts flashing.
2. Press the "M" button again, then press "+" or "-" until "0" or "1" is displayed on the handset.
3. Press the "+" or "-" buttons to switch "0", and "1".
4. Press the "M" button the desk is now ready to use.

TROUBLESHOOTING:

The first step to reconnecting all wires and power code is to make sure the wires are solidly connected. Then RESET THE DESK:

Error code	Error cause	Measure
E04	Handset not connected	Check handset cable connection to the controller and execute RESET .
E05	Anti-collision	Fixed controller and handset.
HOT	Overheat	Allow the desk to cool down for 5-18 minutes.
E11	Lifting leg 1 not connected	Check lifting leg cable connection to the controller and execute RESET .
E21	Lifting leg 2 not connected	Check handset cable connection to the controller and execute RESET .

If the error cannot be corrected through the described measure:

Unplug the power plug.

Wait approx. 5 minutes

Execute RESET.

If an error still occurs after these steps have been executed. Please contact your sales rep.